

# Pellet stove (air) Family Fox IT

/ assembling , spare part diagram /

- 1 - Plate holder for control panel
- 2 - Control panel
- 3 - Top plate
- 4 - Pellet reservoir
- 5 - Pellet reservoir cover
- 6 - Up holding plate
- 7 - Heating air canal plate
- 8 - Heating Fan
- 9 - Igniter
- 10 - Combustion Fan
- 11 - Auger set
- 12 - Motor for auger
- 13 - Base holder plate
- 14 - Right side cover
- 15 - Left side cover
- 16 - Main board plate holder
- 17 - Main board
- 18 - Air Heat exchanger
- 19 - Front Face Set
- 20 - Burning Pot
- 21 - Cover plate of cleaning department
- 22 - Door
- 23 - Ceramic Glass
- 24 - Rope
- 25 - Handle
- 26 - Leveler holders

